


01/01/01	XXX	REV_DESC	XXX		
REV	DATE	DES	REVISION DESCRIPTION	CADD	CHK RVW

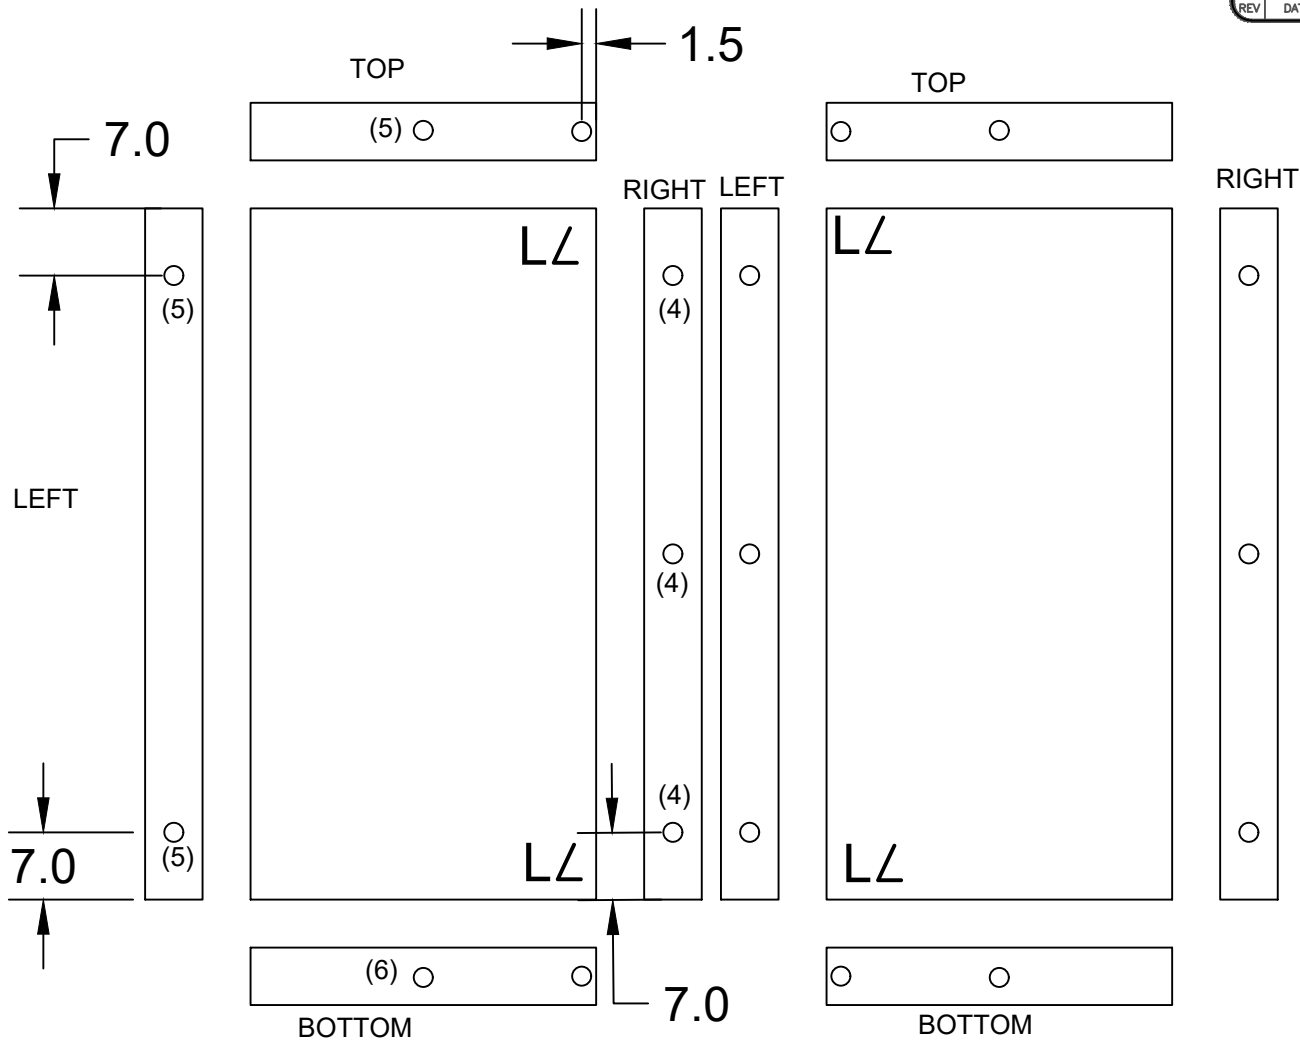

- (4) #10 x 1- $\frac{1}{4}$ in Hex Washer Head Self (410 Stainless Steel)
- (5) $\frac{1}{2}$ in. x 2- $\frac{1}{4}$ in. Maxi-Set Hex-Head Concrete Anchor
- (6) $\frac{1}{4}$ in. x 3- $\frac{1}{4}$ in. White Hex-Head Concrete Screw.

NOTE: Numbers are mirrored onto other half of the drawing

SHUTTER INSTALL INFORMATION HS2

1. Unscrew the L angle (LZ), install the shutter, and then reassemble it in its original position for both sides of the double HS2.
2. After all the installation and assembly is complete, if the shutter is tight, loosen the screws in reverse and adjust it so that it opens smoothly.
3. Finish with silicone on the top, left, and right sides.



PROJECT
 AH Screens
 HS2 double hurricane shutter drawing

TITLE
 HS2 Double Hurricane Shutter

DESIGN		3/27/2025	FILE No.	5
CADD		3/27/2025	SCALE	20:1
REVIEW			REV.	
PROJECT No.				